



VOLVO

SERVICE BULLETIN

SUBJECT: FUEL INJECTION	PRODUCT CARS
	GROUP 27
DATE: FEB. 1973	NO. 7

Irregular Running at Steady Throttle

Worn or dirty throttle switch contacts may cause irregular running when driving at steady throttle, like a momentary interruption of the ignition.

The disturbances usually appear in a certain speed range.


Checking throttle switch:

1. Remove the cover screws and the cover.
2. Check that the throttle is fully closed.
3. Use an ohmmeter to check that there is full resistance, no current flow, between terminals 9 and 20 of the throttle switch, see Fig.
4. If there is a current flow, clean the contact thoroughly with trichloroethylene and carefully dry with compressed air.
5. Repeat step number 3 above.

If the current flow has ceased, re-install the cover and test drive.

If the current flow continues, the throttle switch has to be replaced. Install per instructions in the Service Manual.

NOTE: Check that the throttle switch top holes are covered with a piece of tape.

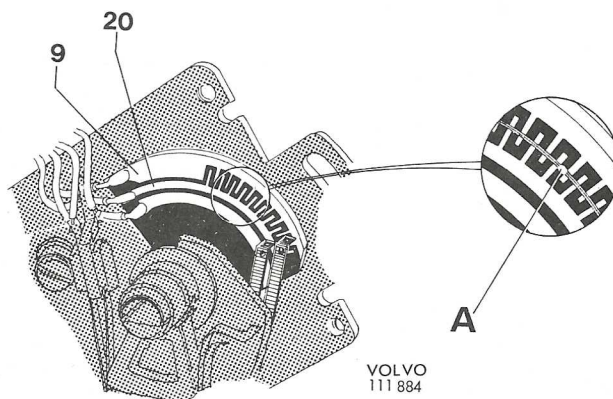

VOLVO
111 884

- A. Current flow caused by material worn off the slip contact.