



Fig. 4 Högtalarledning

- a = Ledningsmatta till vänster högtalare
- b = Ledningsmatta till höger högtalare
- c = Ledningsmatta, instrumentbräda – bakparti
- d = Ledningsmatta till stereobandspelare/radio

Fig. 4 Speaker cables

- a = Cable harness to left speaker
- b = Cable harness to right speaker
- c = Cable harness, dash – rear section
- d = Cable harness to stereo player/radio

Abb. 4 Lautsprecherleitungen

- a = Kabelbaum zum linken Lautsprecher
- b = Kabelbaum zum rechten Lautsprecher
- c = Kabelbaum, Armaturenbrett – Fond
- d = Kabelbaum zum Stereo-Kassettenspieler bzw. Radioempfänger

Figure 4 Câbles de connexion

- a = Câbles pour haut-parleur de gauche
- b = Câbles pour haut-parleur de droite
- c = Faisceau de câbles entre planche de bord et partie arrière de voiture
- d = Câbles pour radio/lecteur de cassettes

The 4 wire speaker loom normally is found under the carpet on the driver's side of the car. That is what feeds from the radio. The speaker wires are initially part of the larger loom that goes back to the rear light assembly, but has two 2-wire looms that branch off about 24" beyond the seat belt wire

Jim Perry 2021-12-22