


# Montering av stänkskydd P 1800

## Fitting mud flaps on P 1800

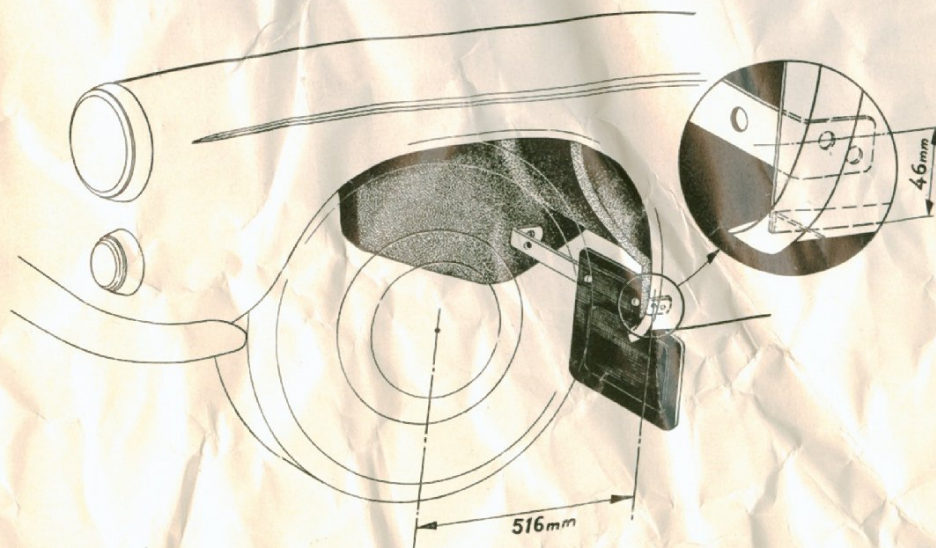

### Främre stänkskydd


Stänkskyddets fästjärn monteras på ett avstånd av 516 mm från centrum genom framhjulsnaven. OBS! Hjulen måste stå rakt fram. I höjldled placeras fästjärnet med mått enligt fig.

För montering av stag och skydd erfordras 5 st skruvar detaljnummer 107430 samt 2 st brickor detaljnummer 120175.

### Front mud flap

The attaching bar of the mud flap is fitted at a distance of 516 mm (20 3/8") from a centre line through the front wheel hubs. NOTE. The wheels must be pointing straight forwards. The vertical measurement for fitting the attaching bar is shown in the figure.

For fitting the stay and guard five bolts part number 107430 are required together with two washers part number 120175.

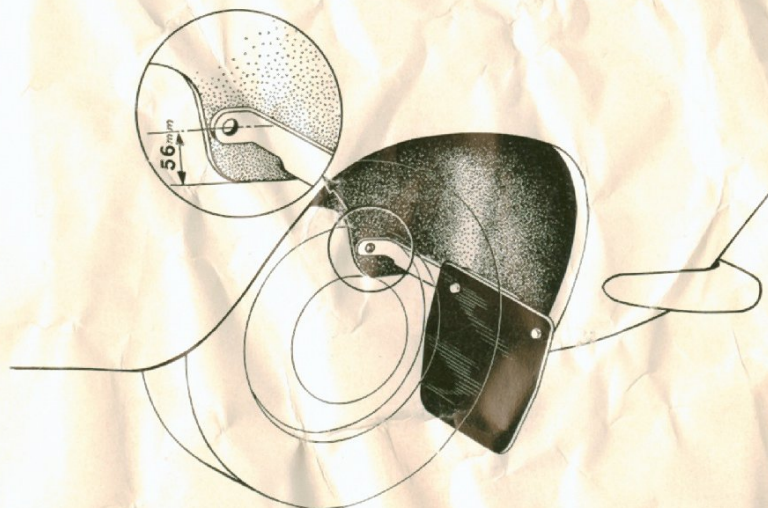

### Bakre stänkskydd

Stänkskyddets fästjärn monteras i bakskärmens kant samt hjulhuset enligt bild. I längled bestäms avståndet av skärmens bakkant. I höjldled placeras skyddet med mått enligt fig. För montering av stag och skydd erfordras 3 st skruvar 190364 samt 2 st brickor 120175.

### Rear mud flap

The attaching bar of the mud flap is fitted on the edge of the rear mudguard and wheel housing as shown in the figure. The longitudinal distance is determined by the rear edge of the mudguard. The vertical measurement for positioning the guard is shown in the figure.

For fitting the stay and guard three bolts part number 190364 are required together with two washers part number 120175.